 
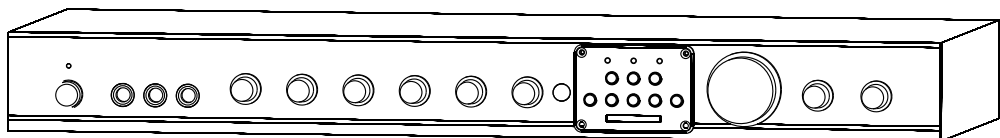 


# Mixer-710

## Professional Karaoke Mixer and MP3+G Recording Player

The unique design of this Professional Karaoke Mixer and MP3+G Recording Player has built-in recorder and player module. Now you can digitally record all of your performances by using Mixer-710

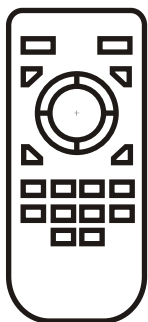

# Warnings, Cautions And Others



## **Caution**

Disconnect the mains plug to shut the power off completely. The POWER is not disconnected from the mains line when the POWER button on the front panel is pressed in.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## **WARNING**

To reduce the risk of fire or electrical shock, do not expose this appliance to rain or moisture.

## Safety Instructions

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

### **1. Read Instructions**

All the safety and operating instructions should be read before the product is operated.

### **2. Retain Instructions**

The safety and operating instructions should be retained for future reference.

### **3. Heed Warnings**

All warnings on the product and in the operating instructions should be adhered to.

### **4. Follow Instructions**

All operating and use instructions should be followed.

### **5. Attachments**

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

### **6. Cleaning**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

### **7. Ventilation**

The appliance should be situated so its location does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation slots.

### **8. Heat**

The appliance should be situated away from heat sources such as radiators, heat register, stoves, or other apparatus (including amplifiers) that produce heat.

### **9. Water and Moisture**

Do not use this unit near water. For example, near a bathtub or in a wet basement and the like.

### **10. Power-cord Protection**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the appliance.

### **11. Lightning**

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

### **12. Carts and Stands**

The product should be used only with a cart or stand that is recommended by the manufacturer.

12 A. An appliance and cart combination should be moved with care.

Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

### **13. Power Sources**

product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

### **14. Grounding and Polarization**

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

### **15. Power Lines**

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

### **16. Overloading**

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

### **17. Object and Liquid Entry**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

### **18. Replacement Parts**

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

### **19. Safety Check**

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition

### **20. Damage Requiring Service**

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power supply cord or plug is damaged.

B. If liquid has been spilled, or objects have fallen into the product.

C. If the product has been exposed to rain or water.

D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

E. If the product has been dropped or damaged in any way.

F. When the product exhibits a distinct change in performance-this indicates a need for service.

### **21. Servicing**

Do not attempt to service it yourself as operating instructions, do not attempt to service it yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personal.

# Unique Advantages

 
## Karaoke Mixer Part

- 3 x 1/4" Microphone Inputs - Connect 3 microphones to the front panel
- Music Volume Control
- Music Treble Control and Bass Control
- 3 Individual Microphone Volume Control
- Microphone Treble Control and Bass Control
- Microphone Echo Control
- RCA Audio and Video LINE IN

## MP3+G Recording Player Part

- Number Index function can support:
  - 4,000 songs( 8GB SD card)
  - 8,000 songs(16GB SD card)
  - 16,000 songs(32GB SD card)
- Recording while singing, more than 300 songs can be recorded on different size SD cards
- Supports MP3+G and MP3,MP3+LRC new-released karaoke song downloads
- Digital Stereo Key Control & Echo Control
- Vocal Cancel & Vocal Partner(The Amplifier works for MP3 or MP3+LRC format too.)
- User-friendly user interface
- Number index function supports MP3+G songs of different languages, including English, Spanish, Vietnamese, Tagalog, Korean, Japanese and other languages.
- Remote Control
- Supports SD card (up to 32GB).
- Recording format is compressed WAV which enables you to share recorded songs with friends and family.
- Renaming of your own recorded songs.
- Different background selection: Dynamic pictures or blue.

# Basic Operations

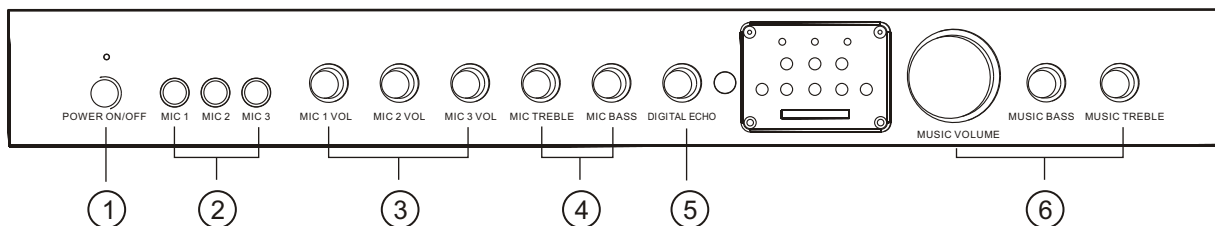



## Mixer Part

- ① **Power On/off**
- ② **1/4" in. Mic Jacks** - These jacks for microphones or instruments. The A-380 supports 3 Mic channels, and can transmit sound though all 3 simultaneously or duo's and trio's.
- ③ **Mic Channel Level Controls** - These Knobs Control The Mic Channels Output Levels Individually. Turn Clockwise To Increase Output Levels, And Counter-clockwise To Decrease Output Levels.
- ④ **Mic Bass And Treble** - The Mic Bass And Treble Control Knobs Serve As A Master Bass And Treble Control For All 3 Mic Channels. To Add More Bass Or Treble To The Mic Channels, Simply Turn Either Of The Knobs Clockwise To Increase Levels Or Counter Clockwise To Decrease Levels. **Note:** Bass And Treble Levels For Each Of The Mic Channels Cannot Be Adjusted Individually.
- ⑤ **Digital Echo**-Digital Echo Knobs Will Alter The Levels Of Effects On All 3 Mic Channels Simultaneously. Echo Is What Makes The Vocals On Records And On The Radio Have That Professional Sound. It's A Very Popular Effect With Singers. It Gives The Vocals A Very Ambient Quality. A Little Echo Is Definitely A Great Effect On Most Vocals, But Not Necessary For All Occasions.


## Music Control Part

- ⑥ **Music Volume, Music Bass And Treble** - These Knobs Control Volume, Bass And Treble Levels From The Master Music Device. The Music Volume Control Knob, Adjusts The Overall Volume Level From The Current Playing Source, While The Bass And Treble Control Knobs Adjust The Bass And Treble Levels From The Source. **Note:** Microphone Levels Are Not Adjusted With These Knobs As They Have Their Own Separate Controls
  
# MP3+G Recording Player Part

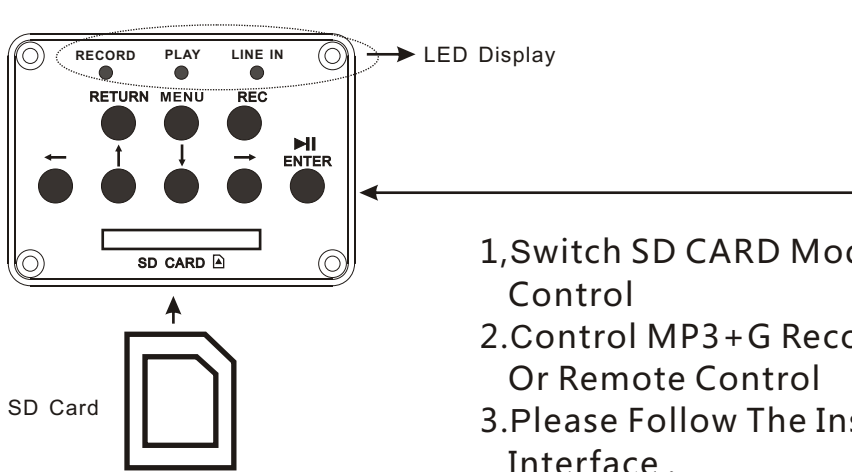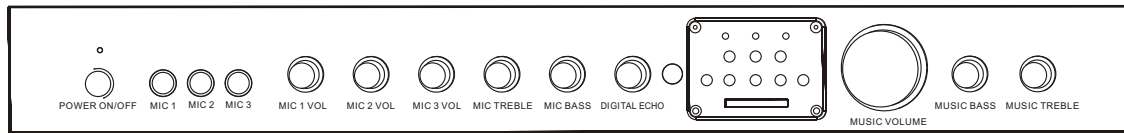

 - 1, Switch SD CARD Mode Or LINE IN Mode By Remote Control
2. Control MP3+G Recording Player By Front Panel Or Remote Control
3. Please Follow The Instruction After Enter User Interface .

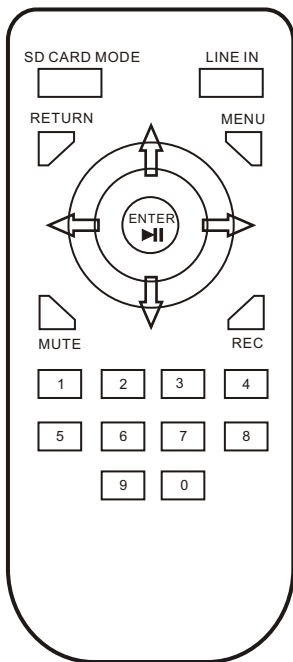

- Select Number Index
- Enter song number by using numbers on player keypad
- Press Enter button on player keypad to play the song



- All the recorded song files will be stored in RECORDINGS song folder automatically.



- Select and reserve your favorite songs from NUMBER INDEX and DOWNLOADS to Playlist by using RESERVE function. (Please refer to page 8)
- The reserved songs in Playlist will be removed automatically when you power off microphone.




- By selecting DOWNLOADS icon, you can view all the song folders and song files that are not in HOUSE SONGS and RECORDINGS song folders.




- By selecting POWER OFF icon, the player will turn off. Press any button to power on again.

# Basic Operations

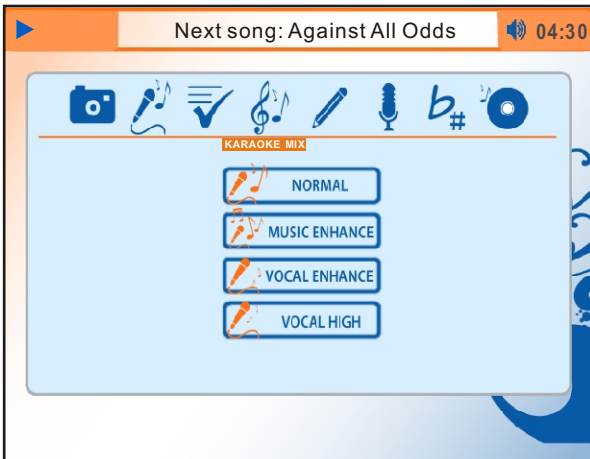 


## Karaoke Mix

 ---4 modes of music and vocal volume mix allow you to choose the ratio of music and vocal volume.  
---**The level of mixed volume is controlled by the amplifier or TV into which you've connected to the player, please adjust TV volume or your audio system volume accordingly.**

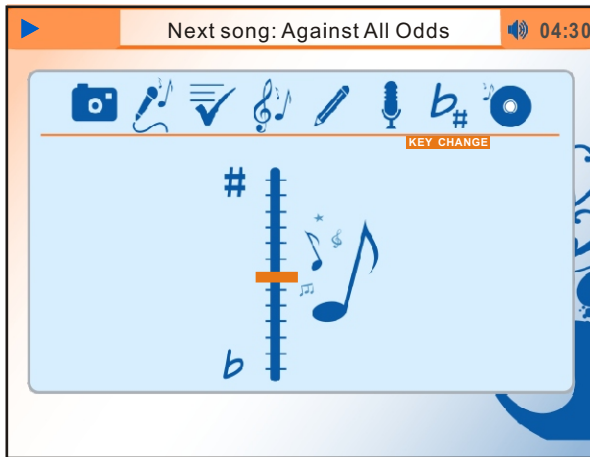

## Key Change

 ---You can adjust the key of music to match your vocal range.

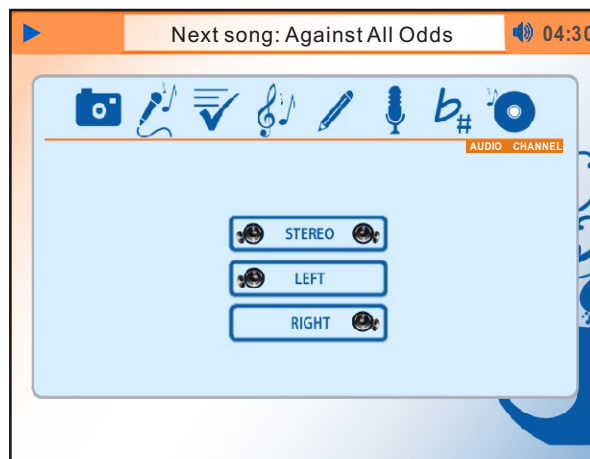

## Audio Channel

 
---Some MP3+G music has original vocal, you can remove the original vocal by switching to Left or Right channel.



## Background


---There are total 15 pictures and blue color that you can choose as background. Choose one of the four categories and the player will pick up background pictures randomly.

# Basic Operations

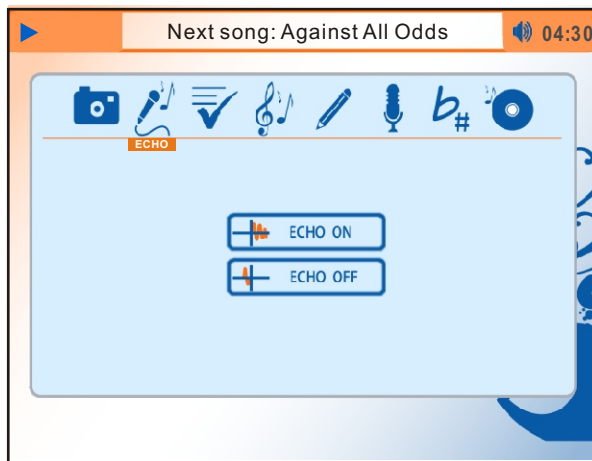


## Echo

 ---You can add resonance to your singing voice by activating the vocal echo.

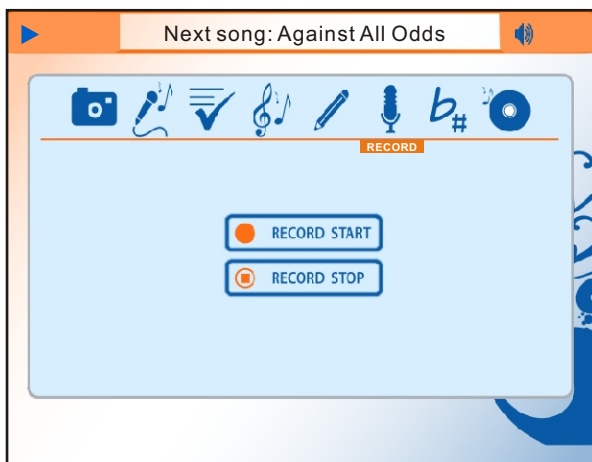


## Record

 - The recorded format is .wav.
- The recorded song file is stored automatically in RECORDINGS song folder.
- You can rename recorded song file by using RECORDING EDIT function.

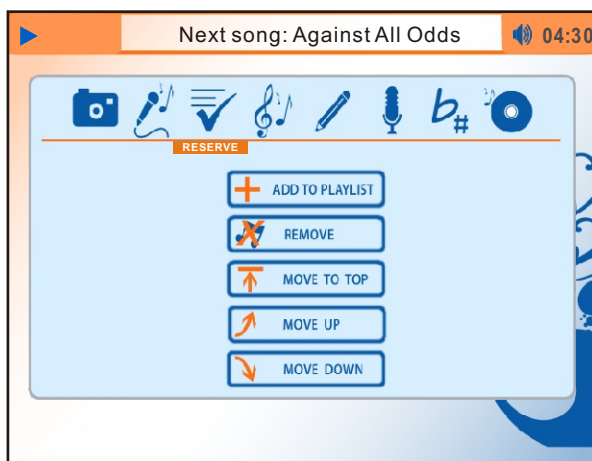

## Reserve

 
- Choose songs from NUMBER INDEX or DOWNLOADS song folder and reserve your favorite songs to playlist.

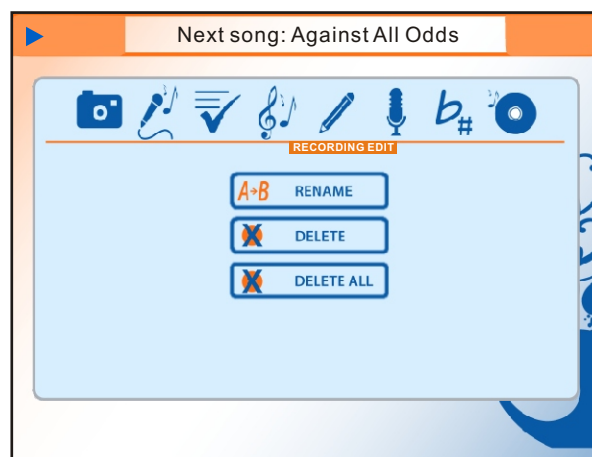

## Recording Edit


- Use Rename or Delete functions to edit recorded songs.
  
# Basic Operations And Song Downloads

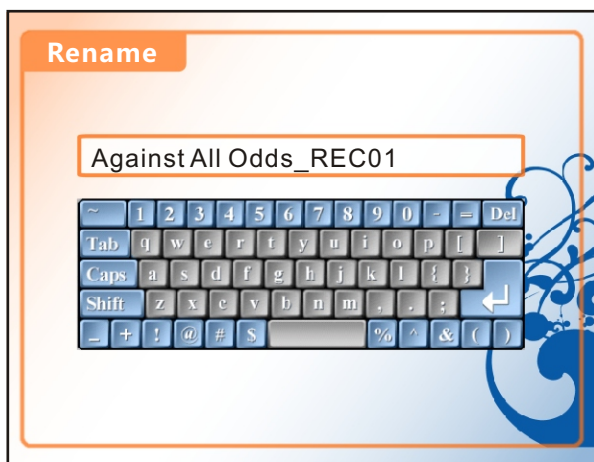





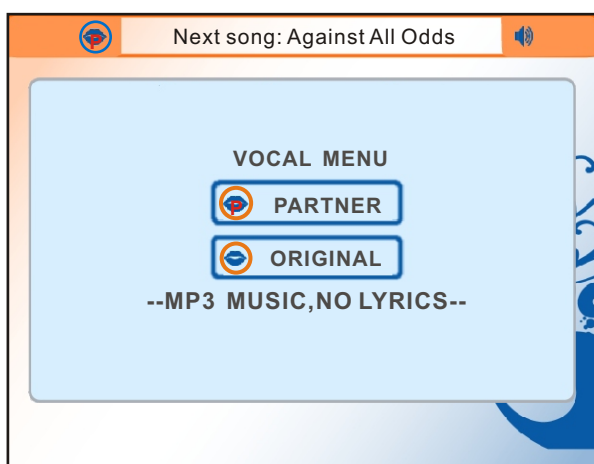








## Rename

---Use 4 directional buttons and ENTER button on the player to select letters or numbers on the on-screen keypad showing on the right interface. If you need to delete letter in the file name, select "Del" on the on-screen keypad and press ENTER button on your player. Once you have entered the entire name of the file, use the directional keys to select "ENTER" key on the digital on-screen keypad, and then press the ENTER button on your karaoke player. This will activate the new song title.



## Vocal Partner

---If you playback MP3 or MP3+LRC format songs, Vocal Partner allows you to remove or reduce original vocal when you sing to the player.

	---Song folder		---Playback		---Mute your vocal and music		
	---Song file		---Pause		---When you playback MP3 or MP3+LRC, Vocal Partner off.		
	---Recorded song file		---Undo mute		--- When you playback MP3 or MP3+LRC, Vocal Partner on.		
	---Record		---Mute your vocal		---Key decrease		---Key increase

# Downloads

## Note:

There are a number of web sites available for downloading new MP3+G karaoke content. Please utilize your favorite internet search engine to find MP3+G Downloads karaoke songs, and you'll be shown a variety of web sites from which to choose new content. Copyright Holders does not condone the downloading of illegal or unlicensed music content and encourages consumers to research each potential website for its legitimacy.

## Basic Operations

### Download Your Favorite Songs

#### Sharing Your Recordings

Your singing performances are stored on the SD card as a WAV file. To share your recordings, or post them on line, you can transfer the files from the SD card to your PC, or download directly from the SD card to a file sharing web site.

#### Transferring to Your PC:

Remove the SD Card from the Karaoke system. Insert the card into the SD Card Reader. Insert the SD Card Reader into the USB slot of your PC. The "Auto Play" screen will be shown on your computer. Select "View Folders" Highlight and click on the "Digital Recordings" file. Highlight the recording of your choice, drag and drop the file from the "Digital Recordings" folder to your desktop, or other file within your PC.

#### Upload To a Web Site:

Go to the web site to which you wish to upload the file, and follow the upload instructions from the web site. Select the file you wish to upload from File folders: My Computer SD Card Digital Recordings You may also use this method to send your recordings to friends as an email attachment.

### SD card is full

If SD card is full, you can either use new SD card to store songs or delete some songs to get space for new songs. You are strongly recommended to back up songs that you will delete.

### Audio Video Line In And Output

